


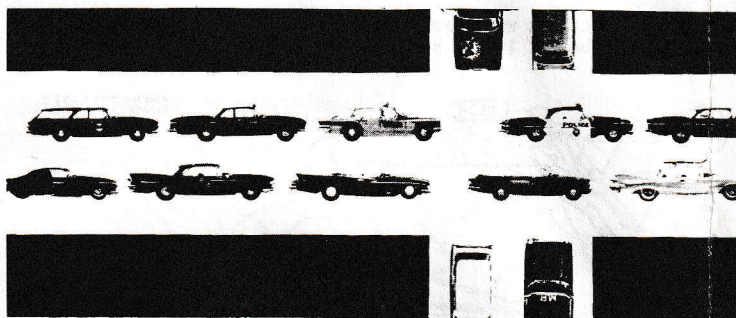

THE SCALE OF
THIS MODEL IS
1/87 ACTUAL SIZE
OR
1" = 7' 3"



002-006019

Copyright 1980 - Heljan/Con-Cor, Bensenville, Illinois

INSTRUCTIONS FOR YOUR CONVERTA-CAR KIT

GENERAL HINTS FOR YOUR CHRYSLER H-O SCALE CARS

Your Converta-Car kit will give you hours of challenging fun. The number of cars you can make are limited only by your imagination. Display your assembled collection on a shelf and listen to the praise of your friends.

1. The hardtop cars are easily assembled by snapping the parts together. No cement needed. In the convertible, only the driver has to be cemented.
2. Trim away any excess plastic from parts before assembling to ensure good fit.
3. Be sure to cut, DO NOT BREAK OFF, chrome parts from runner bar as you may peel off the chrome plating.
4. Read directions on the back of the decal sheet before applying decals.

GENERAL HINTS FOR RE-STYLING OR CUSTOMIZING

BE SURE YOU HAVE THE PROPER TOOLS. . .

Plastic Type Cement & Brush For Application
CAUTION: Do Not Let Cement Touch Eyes, Furniture
Or Clothing. . .
A Sharp Modeling Knife and Blades
Tweezers


Very Fine Sandpaper
Plastic Compatible Paints
Masking Tape or Fluid

1. Examine all the parts and then select those you want to use to re-style or customize. The drawings shown are a few suggestions to start your thinking.
2. Paint all parts before assembly.
3. Use the surplus plastic from the runners to create deluxe extras.

1

HARDTOPS:

INSTRUCTIONS TO ASSEMBLE STOCK CARS

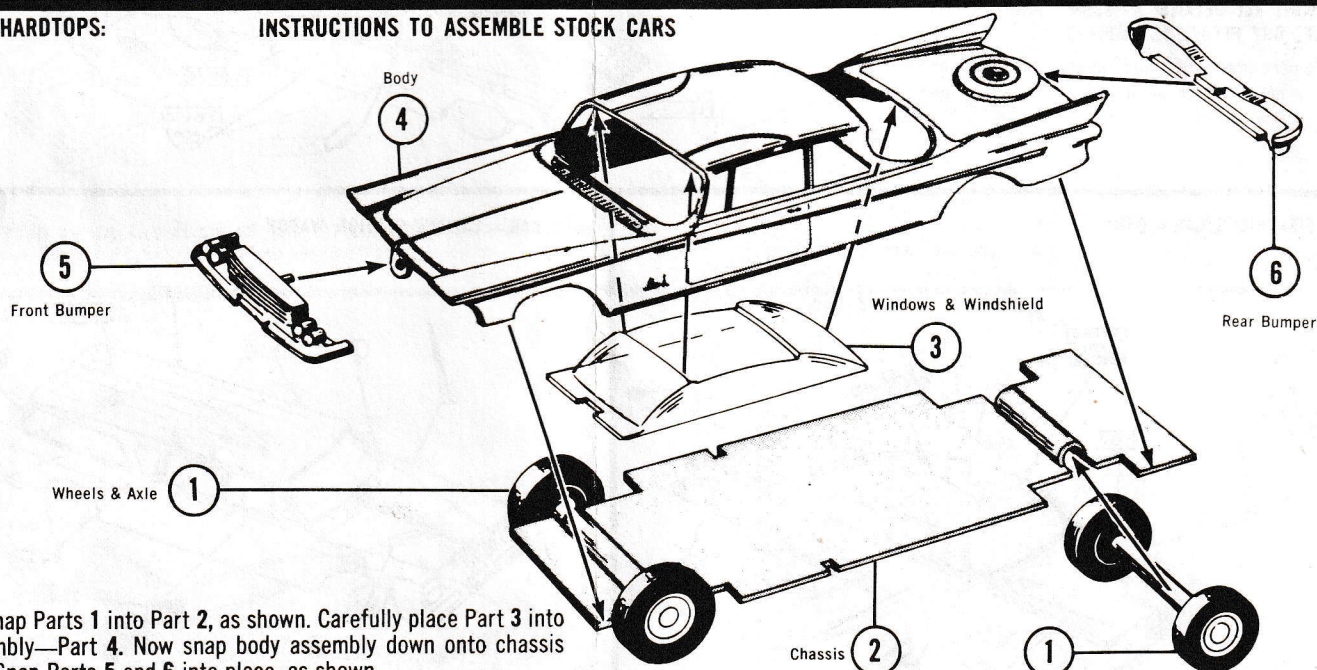


STEP 1. Snap Parts 1 into Part 2, as shown. Carefully place Part 3 into body assembly—Part 4. Now snap body assembly down onto chassis assembly. Snap Parts 5 and 6 into place, as shown.

NOTE: A new decal sheet has been added since these directions were made. Some variations will occur. And, decals will have to be cut to fit specific car body styles.

002-006019


2

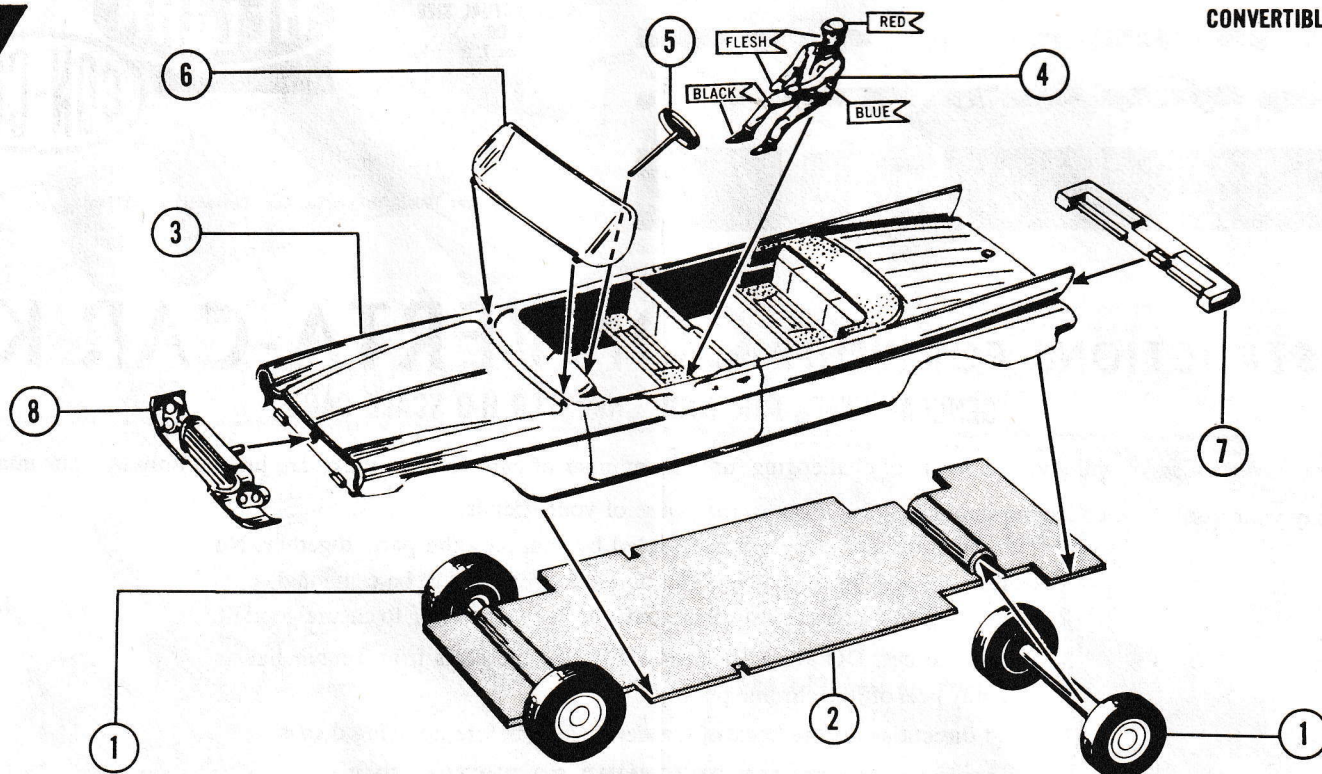


STEP 2. Snap **Parts 1** into **Part 2**, as shown. Carefully snap **Part 3** down onto chassis. Cement **Part 4** (driver) into place. Cement **Parts 5** and **6** into place, as shown. Now snap **Parts 7** and **8** to front and rear of car, as shown.

SUGGESTIONS FOR CONVERTING, RE-STYLING & CUSTOMIZING

MAIL CAR — VALIANT STATION WAGON

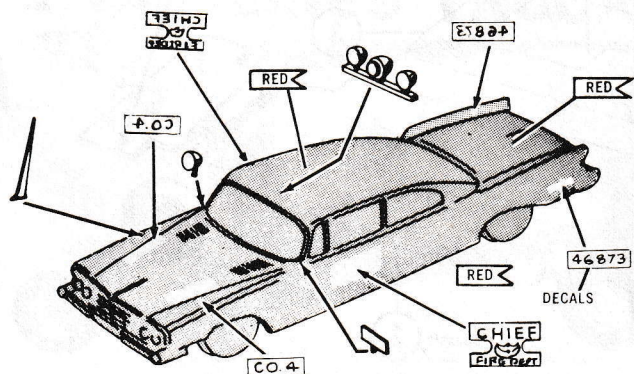


PAINT ALL DETAILS AS SHOWN, AND LET DRY BEFORE ASSEMBLING
Cement the spotlight and antenna into position. Apply decals, as shown.

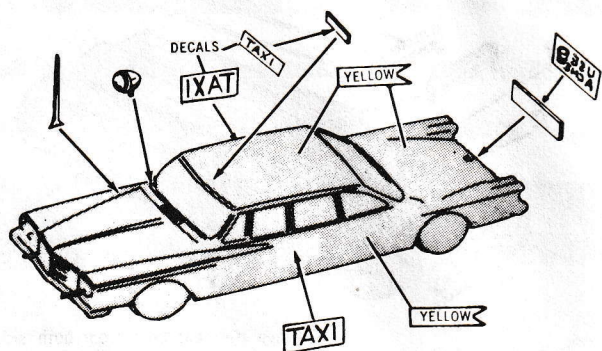

PAINT ALL DETAILS, AS SHOWN, AND LET DRY BEFORE ASSEMBLING.


Cement top sign, rear sign, fender light and antenna into position. Apply decals, as shown.

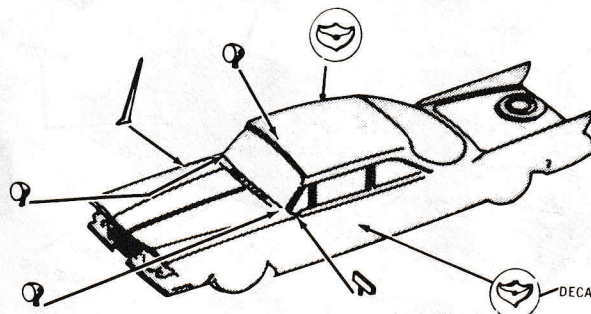

Decal - Use Shield Only

Cement spotlight, rear view mirror, fender lights and antenna into position. Apply decals, as shown.


FLORIST CAR - PLYMOUTH STATION WAGON

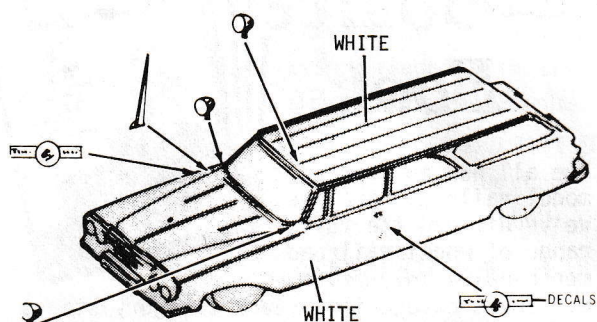

PAINT ALL DETAILS AS SHOWN, AND LET DRY BEFORE ASSEMBLING


Cement fender lights, spotlights, antenna into position. Apply decals, as shown.

PHONE COMPANY CAR - DART

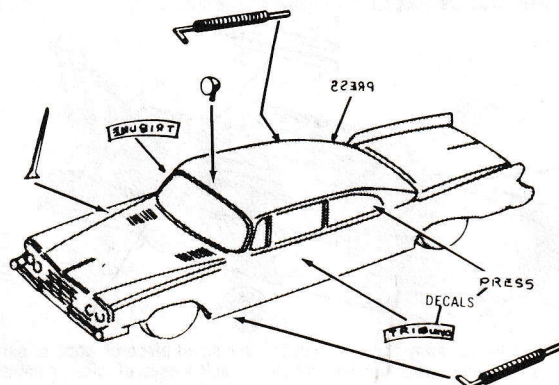

Cement pipes, spotlight and antenna into position. Apply decals, as shown.


HOBBY SUPPLY CAR - VALIANT STATION WAGON

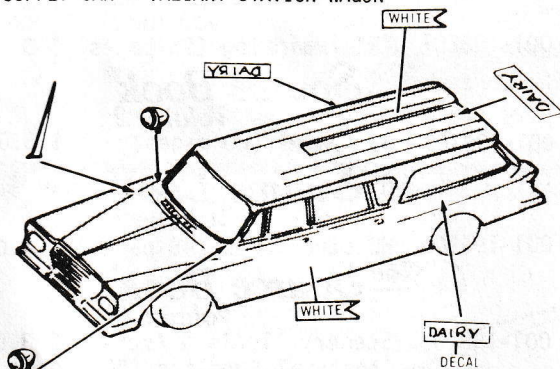

PAINT ALL DETAILS AS SHOWN, AND LET DRY BEFORE ASSEMBLING


Cement fender lights and antenna into position. Apply decals, as shown.

CONSTRUCTION CO. CAR - LANCER STATION WAGON

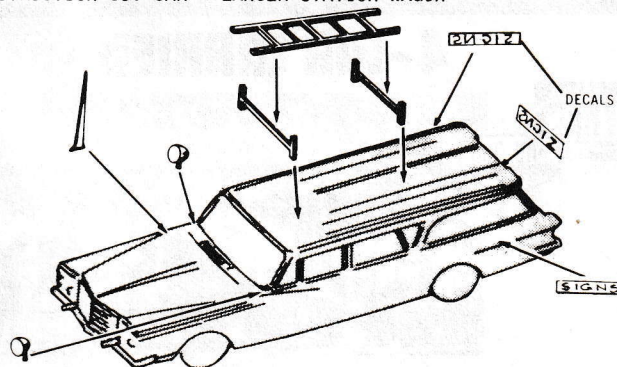


Cement fender lights, antenna, rack and ladder into position. Apply decals, as shown.

CUSTOM SEDAN - POLARA

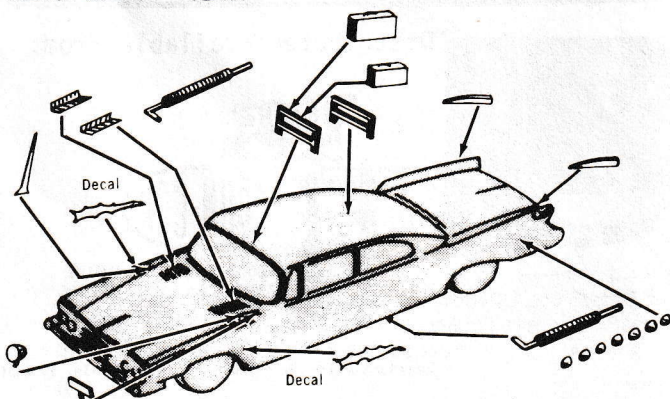


Cement pipes, bullets and fins into position. Now cement spotlight, louvres, baggage rack, baggage and antenna into place, as shown. Apply decals, as shown.

SKI ENTHUSIAST - IMPERIAL

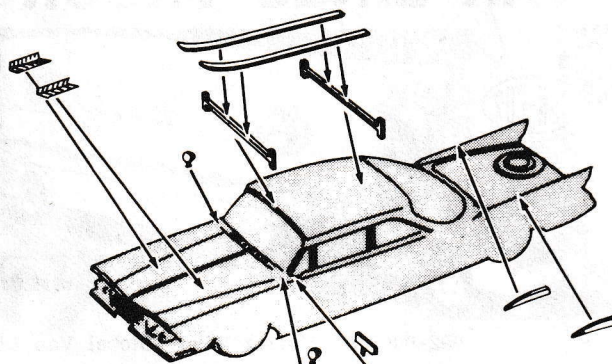


Cement rack, skis, rear view mirror, fender lights, fins, and louvres into position, as shown.

CUSTOM CONVERTIBLE — NEWPORT

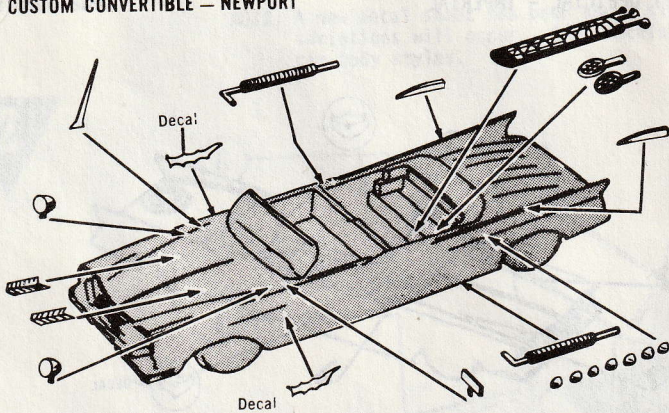


Cement pipes, bullets and fins into place. Now cement spotlights, rear view mirror, louvers, tennis rackets, golf bag and antenna into place, as shown. You may cement figure into place if you wish (as shown in Assembly 2). Apply decals, as shown.

TOW TRUCK OR PICKUP TRUCK — PLYMOUTH STATION WAGON

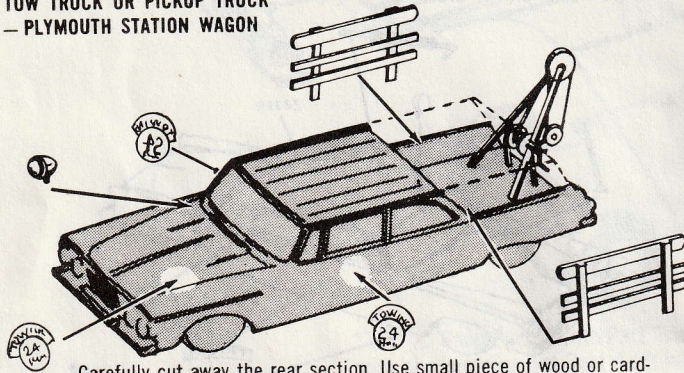


Carefully cut away the rear section. Use small piece of wood or cardboard to make your pulleys and reel. Small pieces of wire or hairpin may be used to make grappling hooks and crank. Use thread to rig boom. Cement crane and boom into rear deck, as shown. Cement spotlight into position. Apply decals, as shown. Material removed from roof may also be used to make stake sides for pickup truck, or a tonneau cover for truck bed.

4-CAR CARRIER

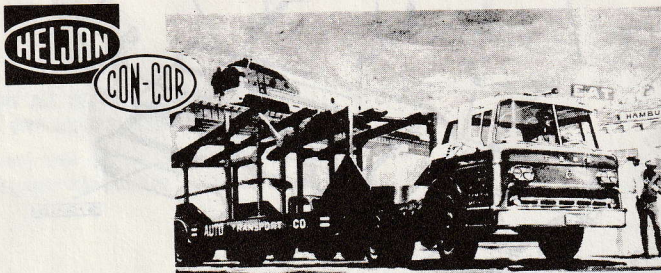

002-006021 Auto Transport - Unlettered \$ 4.98


GLOBAL VAN LINES TRUCK

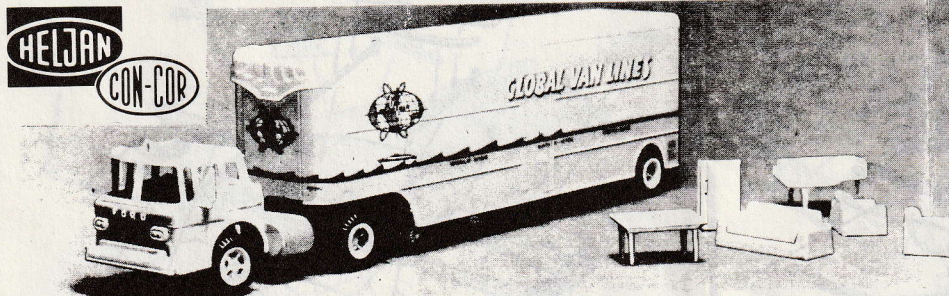

002-006018 Moving Van - Global Van Lines \$ 4.98

PANEL TRUCK — PLYMOUTH STATION WAGON

002-006019

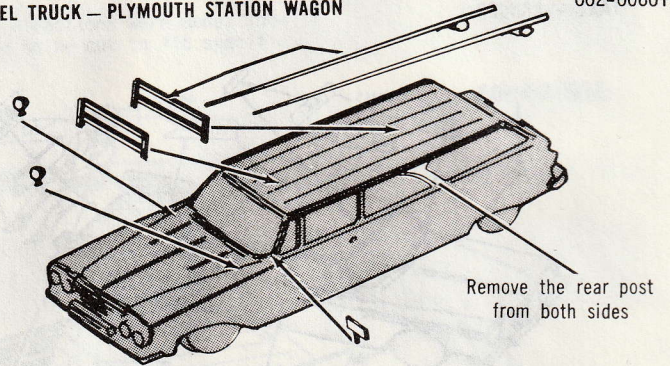

Remove the rear post from both sides of your station wagon and paint the rear window the same color as the rest of the body. Cement baggage rack, fishing poles, fender lights and rear view mirror into place, as shown. If you wish, you may paint a name on the newly painted panels on both sides of your converted truck.

The Source Book®



The all new approach to model railroad catalogs. We've divided the full range of model railroad merchandise into five different categories. Each category stands by itself, becoming a full catalog of THE SOURCE BOOK. You may buy each volume as your needs demand.

The Source Book® Volume 1

001-198201 "N" Trainalog (96 pages) \$ 3.00

The Source Book® Volume 2

001-198102 HO Trains (80 pages) \$ 3.00

The Source Book® Volume 3

001-198103 HO Structures (48 pages) \$ 3.00

The Source Book® Volume 4

001-198204 Scenery, Tools & Architectural Supplies (80 pages) \$ 3.00

The Source Book® Volume 5

001-198205 Railroadiana (48 pages) \$ 1.00

PRICES & AVAILABILITY SUBJECT TO CHANGE

Distributed/Available From:



1025 INDUSTRIAL DRIVE
BENSENVILLE, IL. 60106
PHONE (312) 595-0210

Copyright 1980 - Heljan/Con-Cor, Bensenville, Illinois