

**HO** scale

**#1000**

**Floors**

**&**

**Frames**



Please read

**ALL of the**

**Instructions**

**first!**

Instructions



Manufactured  
here in  
**AMERICA**



**INSTRUCTIONS**




1. Using a sharp modeler's #11 knife or fine tooth razor saw, **CUT** the parts from the sprue - **DO NOT BREAK THEM OFF.**
2. Install couplers (NOT included) and cement pocket covers in place.
3. To install trucks (NOT included) using truck pins, drive pins through truck bolsters and into snaps on frame like small nails. Trucks can then be snapped on and off.
4. If truck pins are used, remove truck mount bosses from the floor **BEFORE** cementing frame to floor. If trucks are to be installed with #2 screws, (NOT included) **DO NOT REMOVE** truck mount bosses from floor.
5. Cement triple valve to frame as shown.



NOTE:

The brake platform, chain and housing are **EXTREMELY DELICATE** and may break at the chain during handling. They can be butted together and rejoined with cement when application to car is done

This super detailed 40' under-frames and floors come 3 to a pack. Each comes with an Ajax brake wheel with chain and brake platform, tripe valve. Our new design concept for snap on trucks (not included) application. There are extra brake wheels and tripe valves per spur. We feel this pack will supply the molder with outstanding capability for super detailing of existing freight cars; also for scratch building of many types of cars.

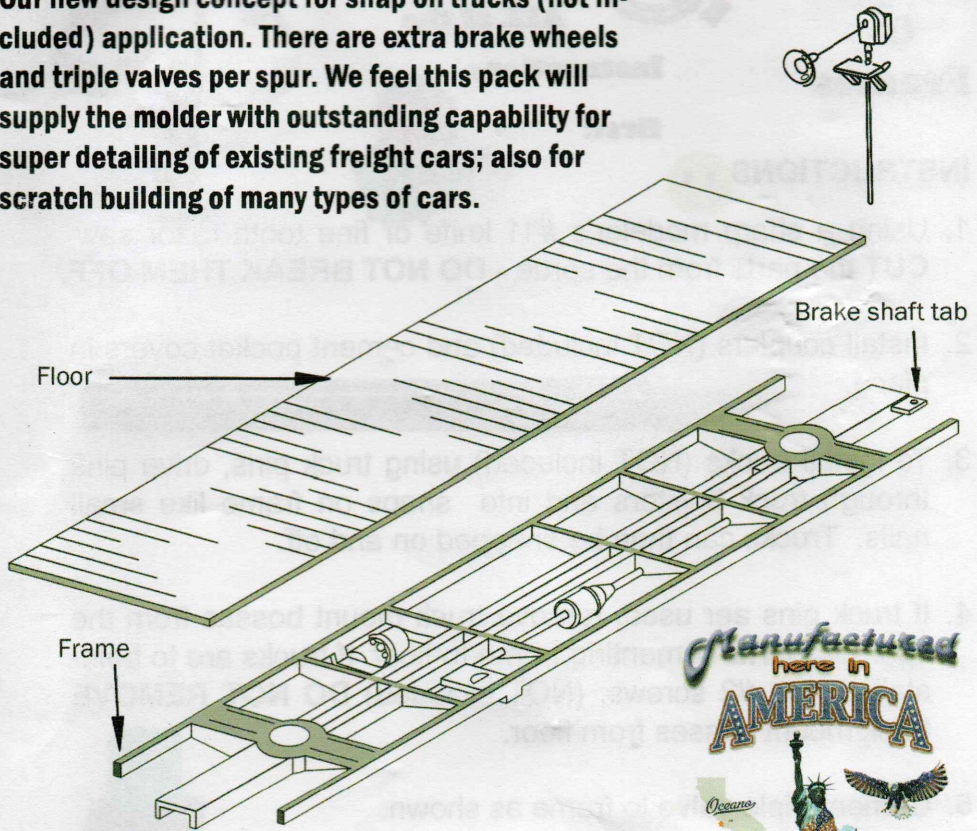

Manufactured  
here in  
**AMERICA**

Oceans



**HO scale #1000 Floor & Frames**



THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING STYRENE, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO:

[www.p85warnings.ca.gov](http://www.p85warnings.ca.gov)

**3 Total!**



8 97332 00249 5